


Bookmaking Making Instructions for Sk# BK-245 & BK-249


Materials List:

Handmade Book Kit, decorative cover paper, pencil, ruler, craft knife, glue stick or other adhesive, bone folder, heavy book or other weight for flattening completed project.


1. Cut Decorative cover paper approximately 10 1/4 x 18 3/4". Please note that this is a handmade product and may have some slight size variations.
2. Measure in 1" from all four sides.

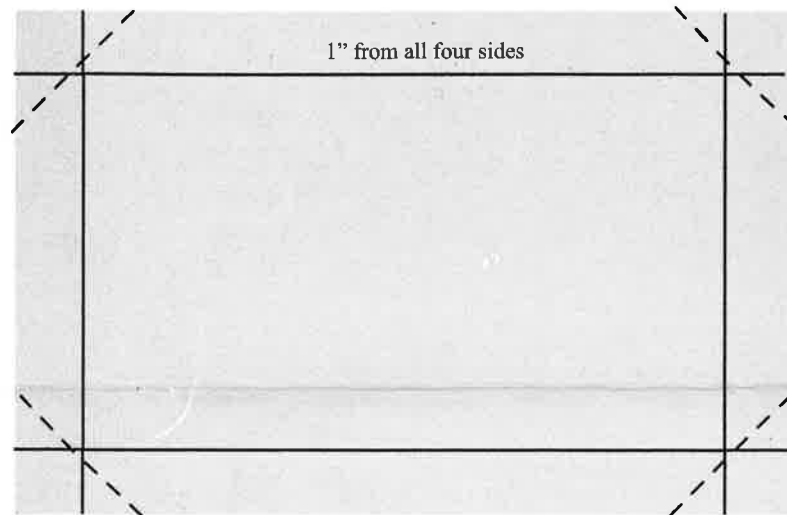

3. Dry place chip board as shown below. Leave open gutter space of 1/4".
4. Cut off corners approx. 1/8" (3mm) from the corners of the board.
5. Apply glue to the spine and cover boards. Place on back side of decorative paper as shown.

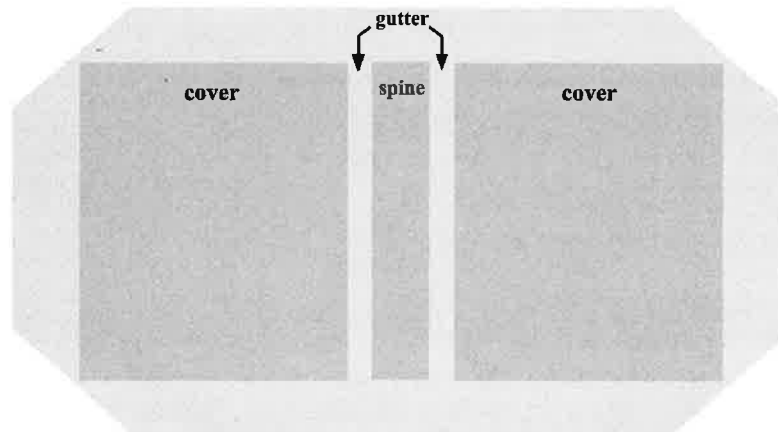

6. You are left with four "turn - ins". Curve all four turn - ins by using your fingers and bone folder then glue down.
7. Apply glue to the front end page of deckle edge insert. DO NOT use glue on spine strip, gutters or the back edge of deckle insert.
8. At this point it is helpful to DRY FIT the deckle insert inside the covers before you apply the glue. Place the deckle insert straight up with the bound edge on the spine and fold the book covers up around the insert. Position the insert so that it is evenly spaced top to bottom. There maybe more space on the side where the book opens, this is normal. Make sure that the book spine of the insert is touching against the cardboard spine of the cover.

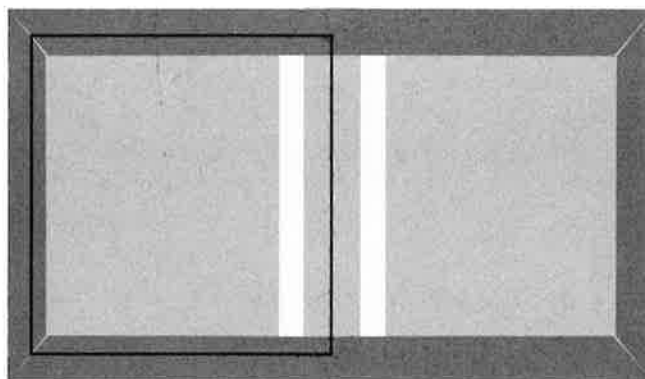

9. When finished, close book and place under heavy weight.